

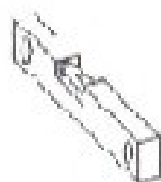


Инструкция по сборке душевой кабины P-502

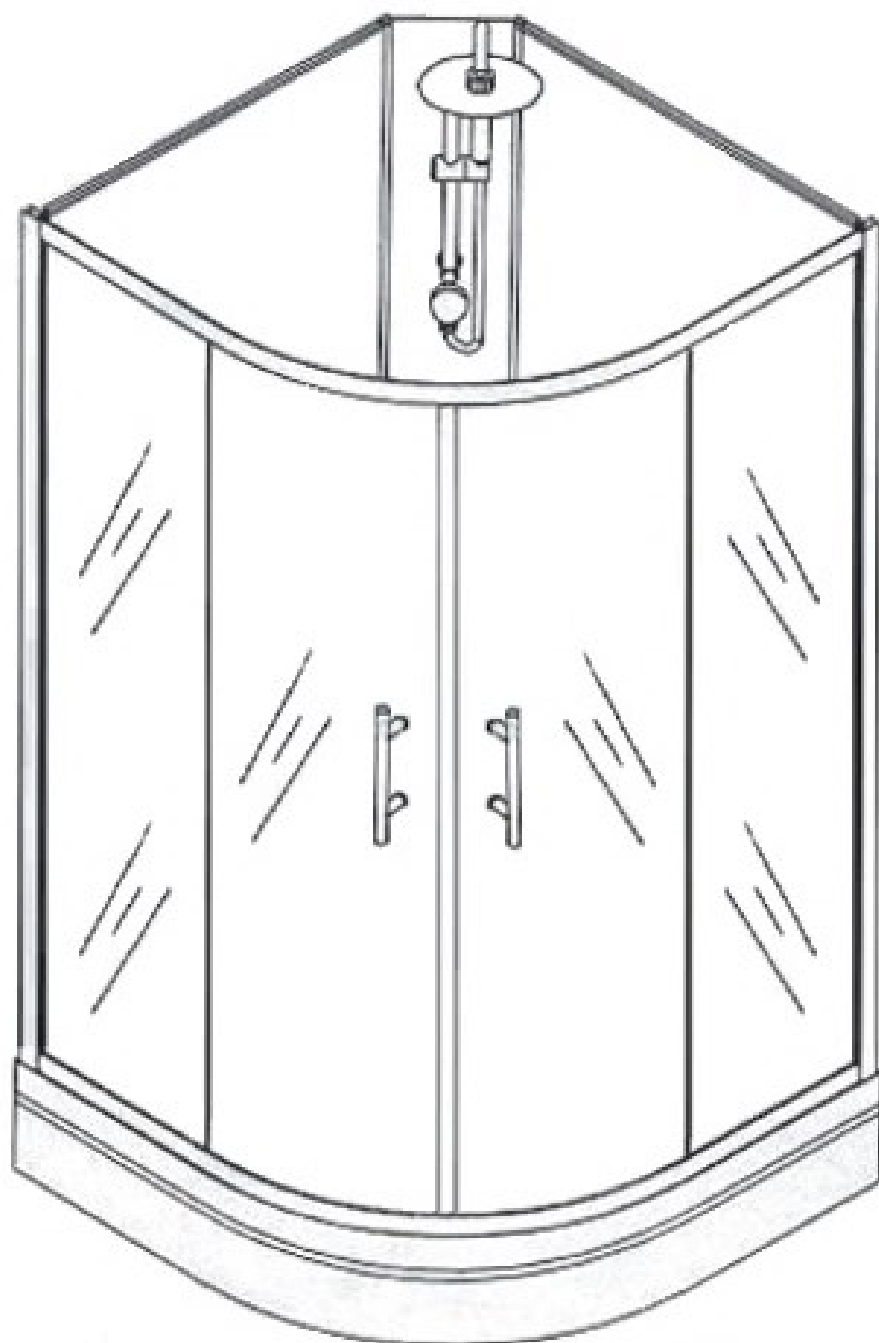

А

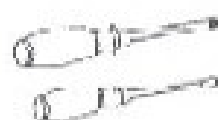

Б




В




Г


1/3

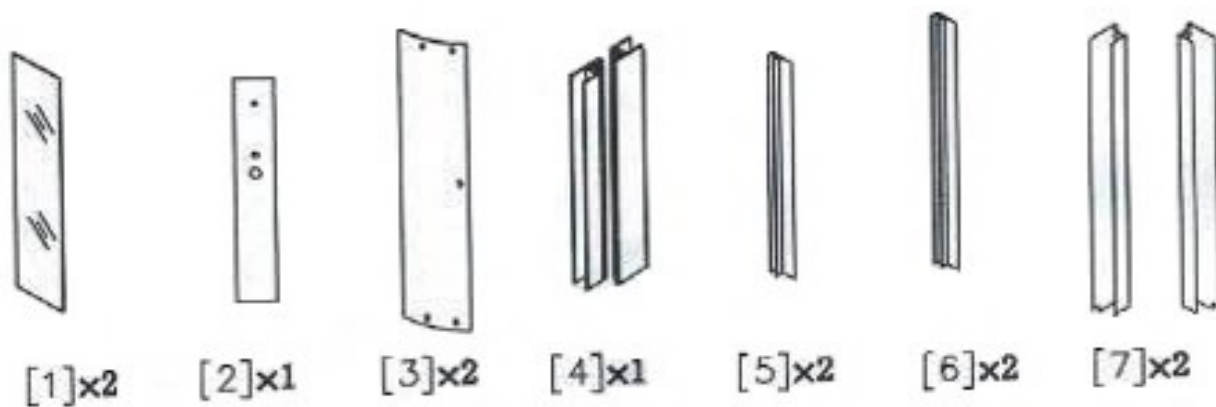

2/3

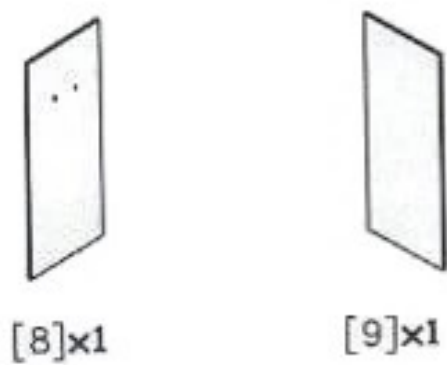

3/3

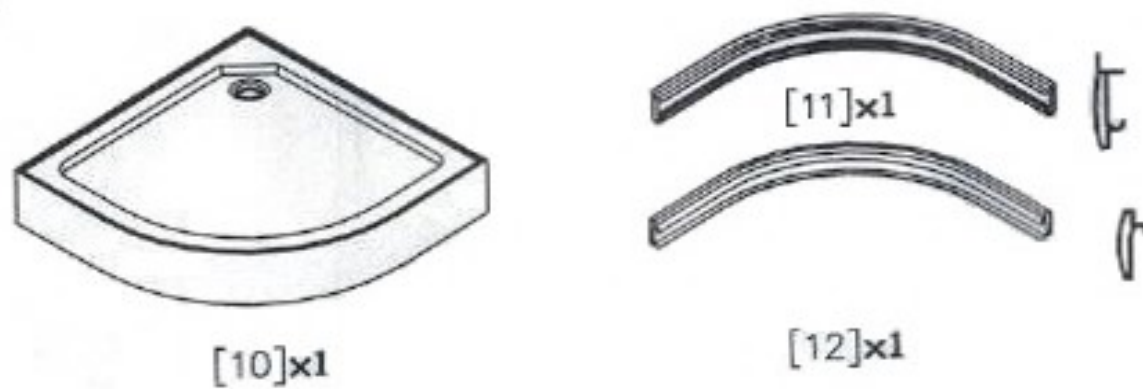



[18]x4



(ST4*10)

[19]x4



(ST3.5*16)

[20]x4



(ST3.5*30)

[21]x8



(M4*25)

[22]x8



(M4*16)

[23]x8



24]x1



(ϕ 4.2mm)



(ϕ 2.5mm)

25]x2



[26]x1



[27]x1



[28]x10



[29]x1




[30]x2




[31]x8


1:

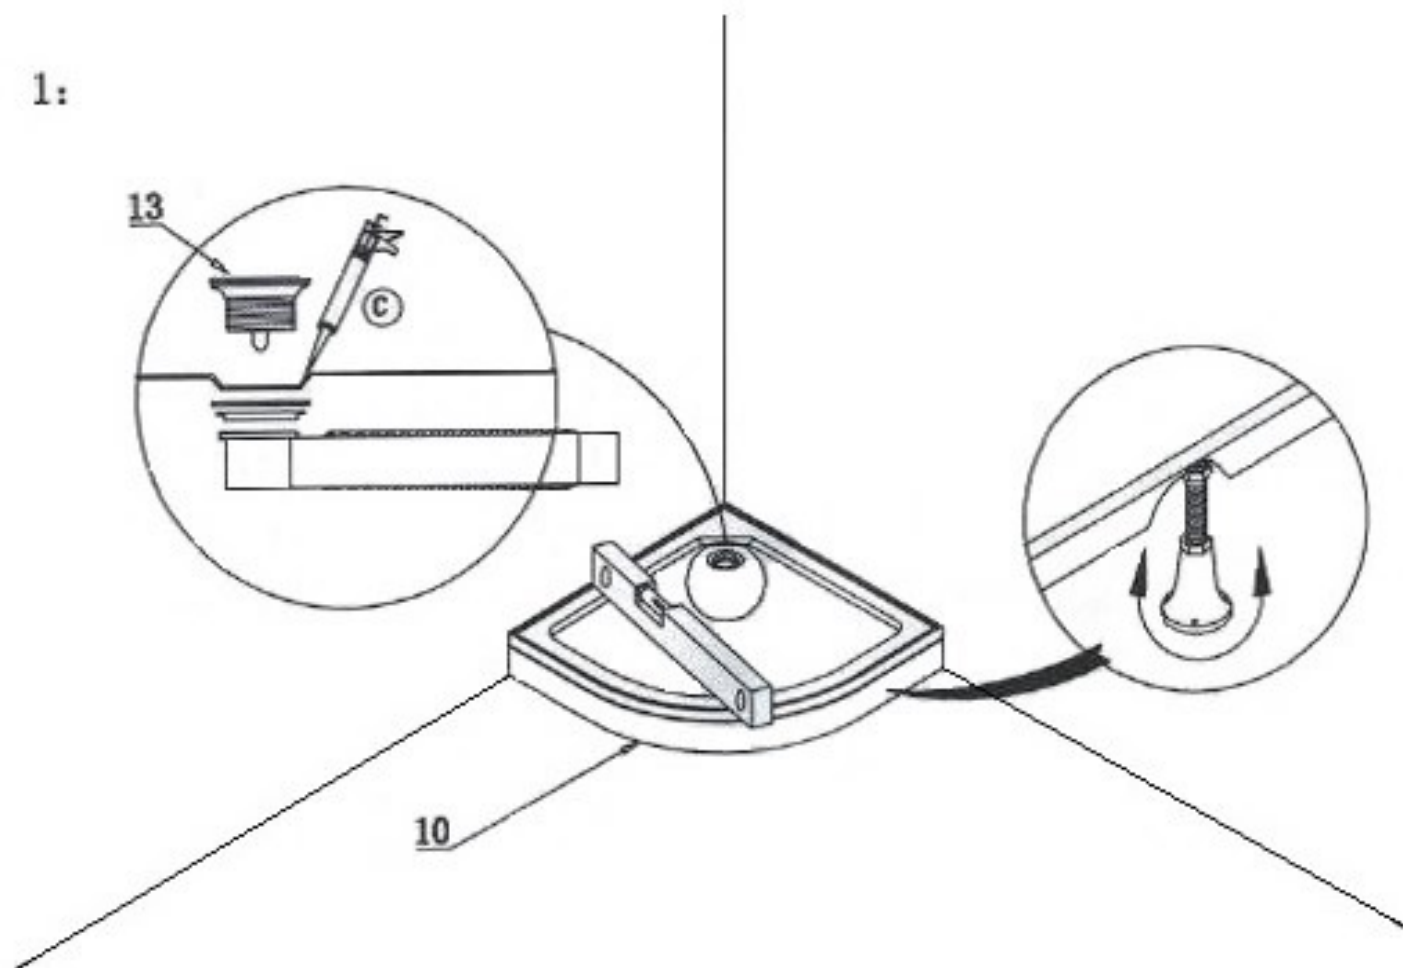


2:

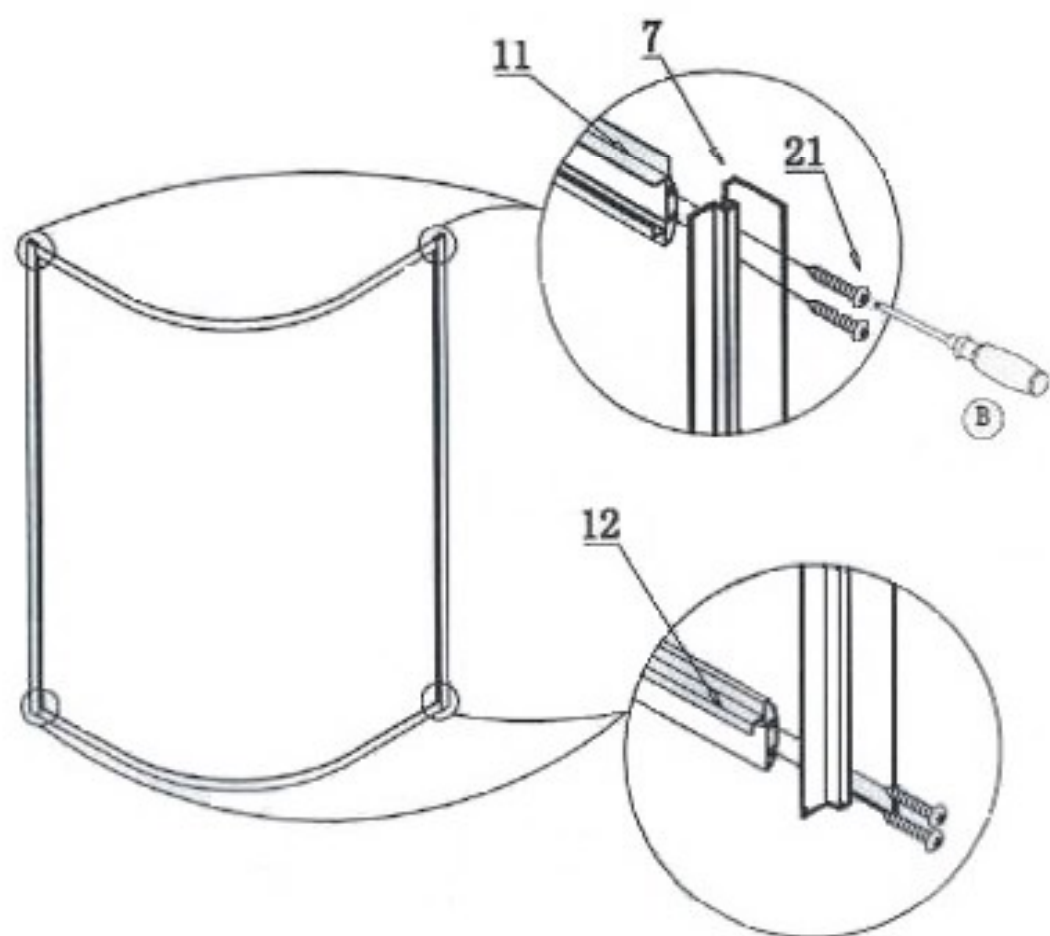

3:

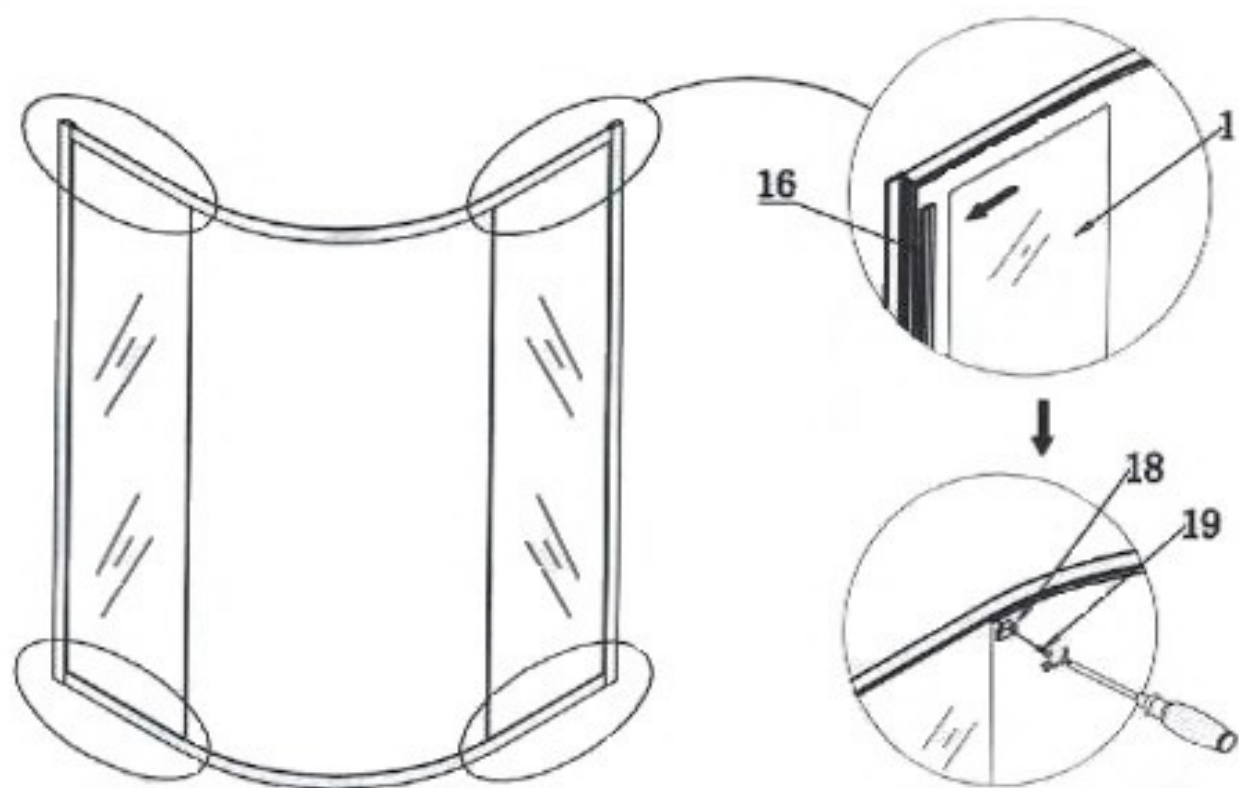


4:

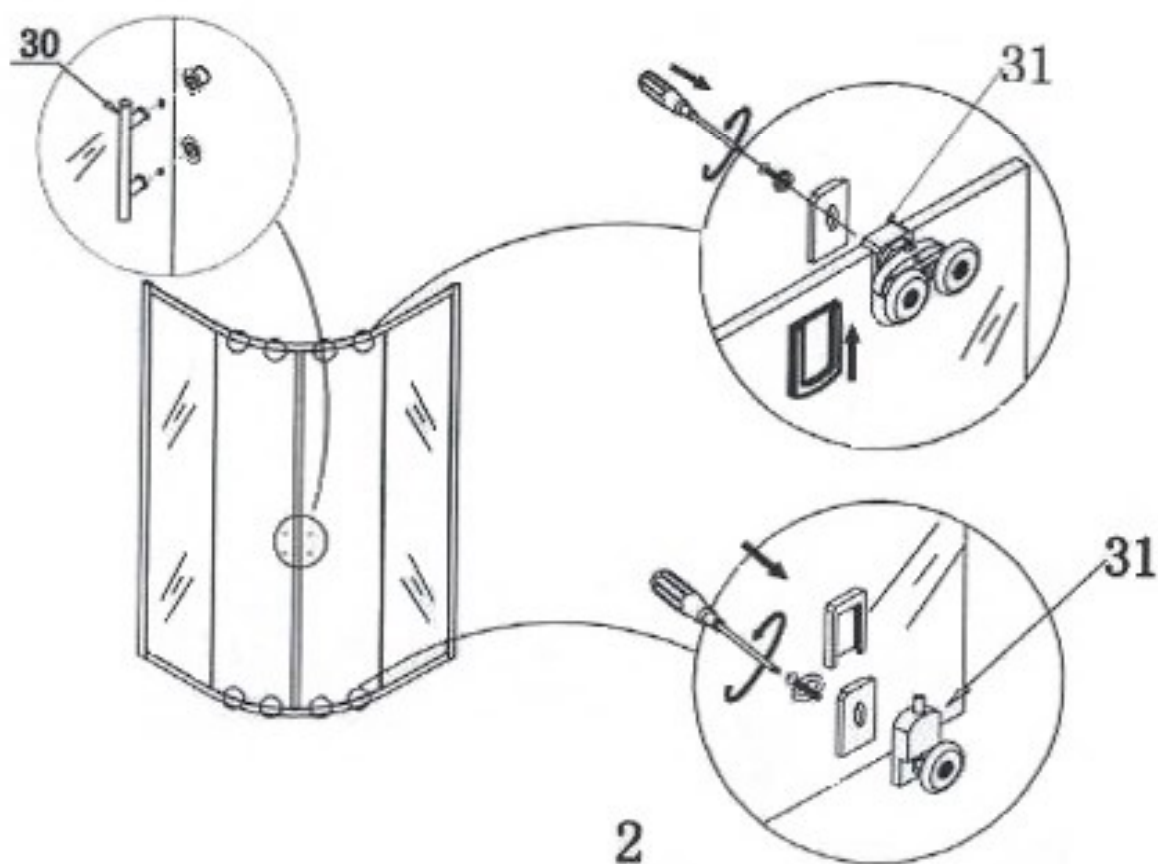


2


5:

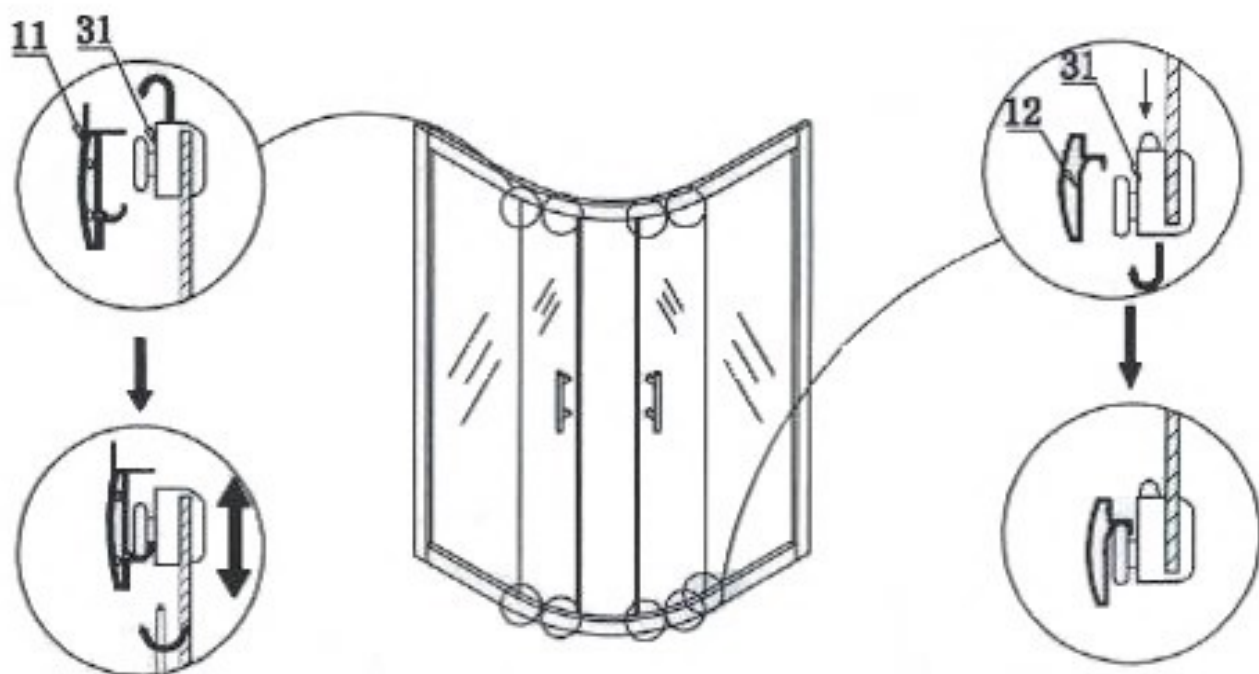


6:

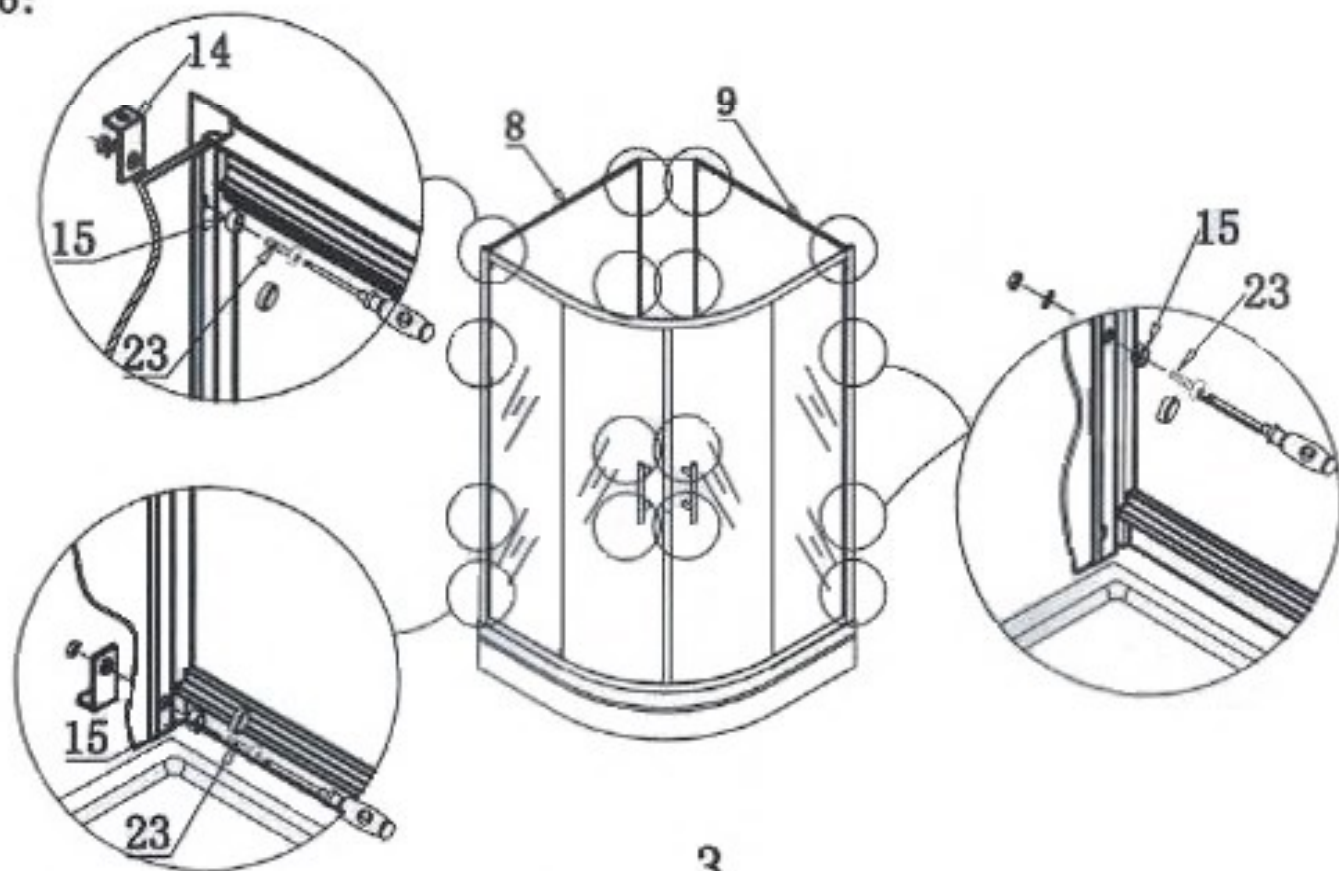


7:

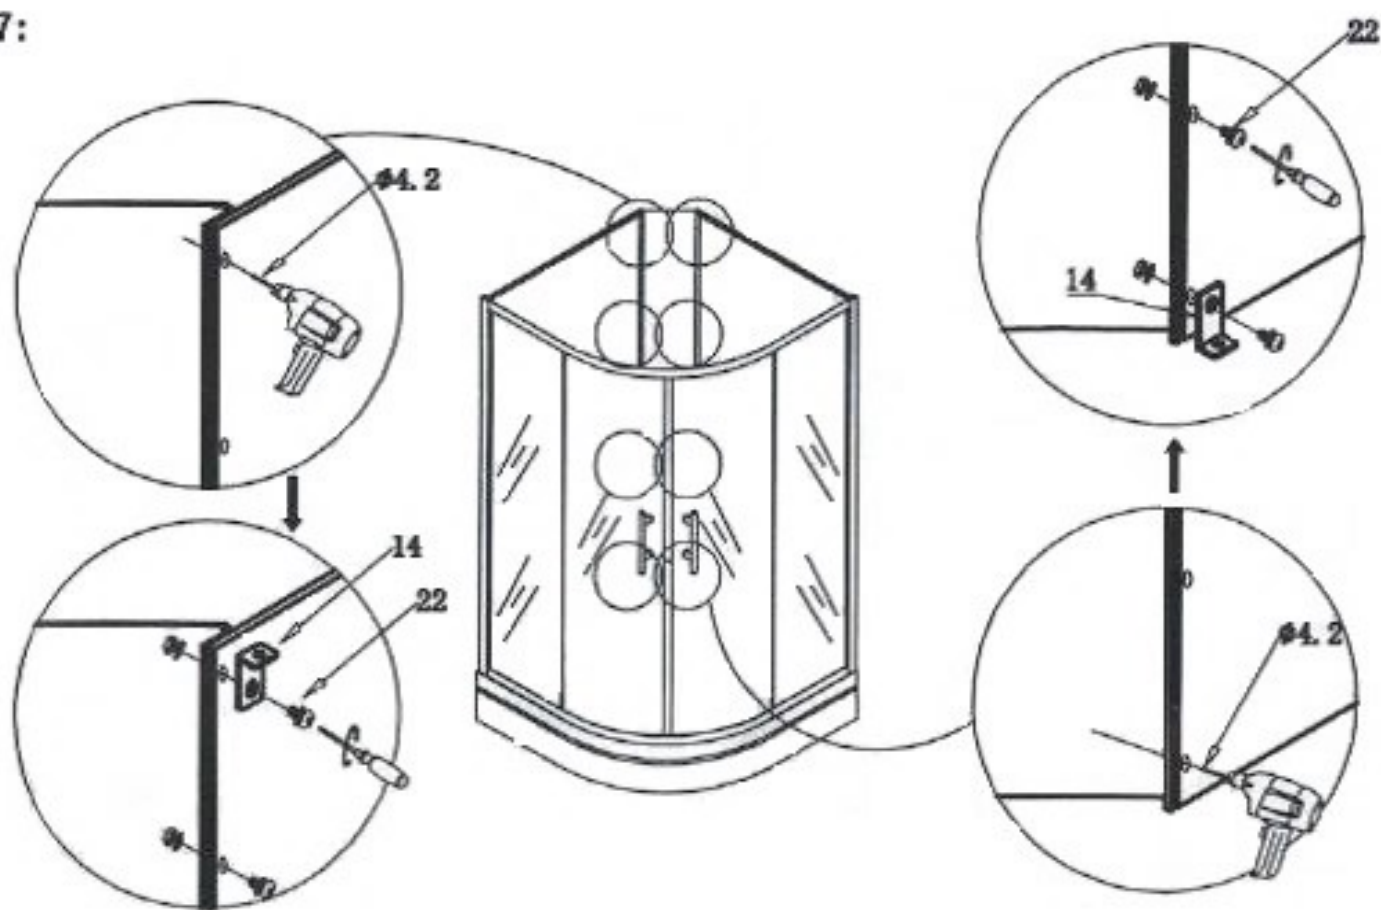


8:

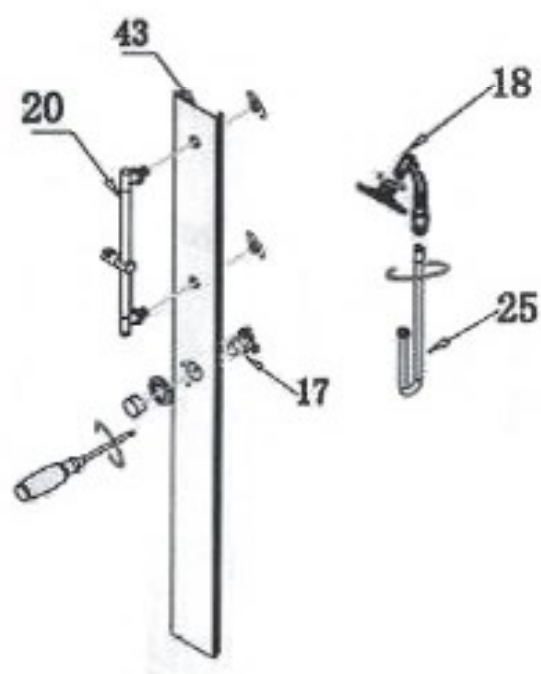

9:

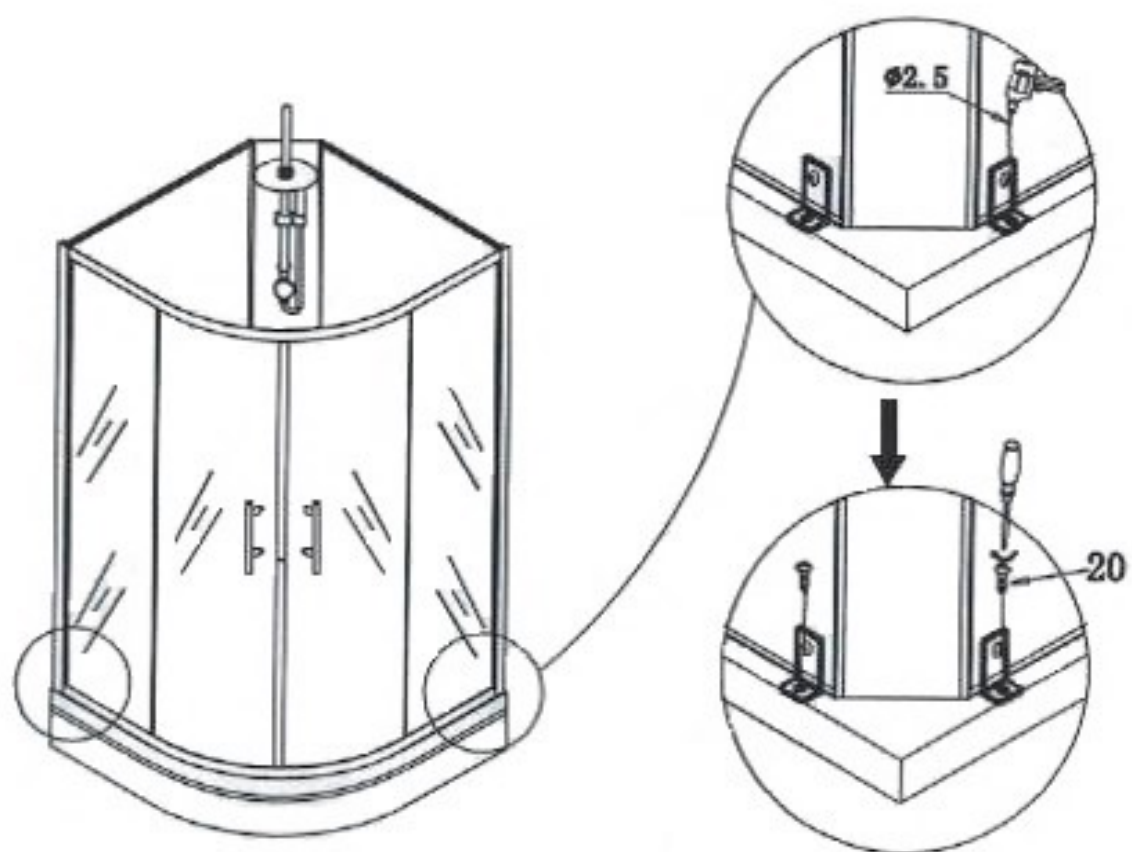

10:

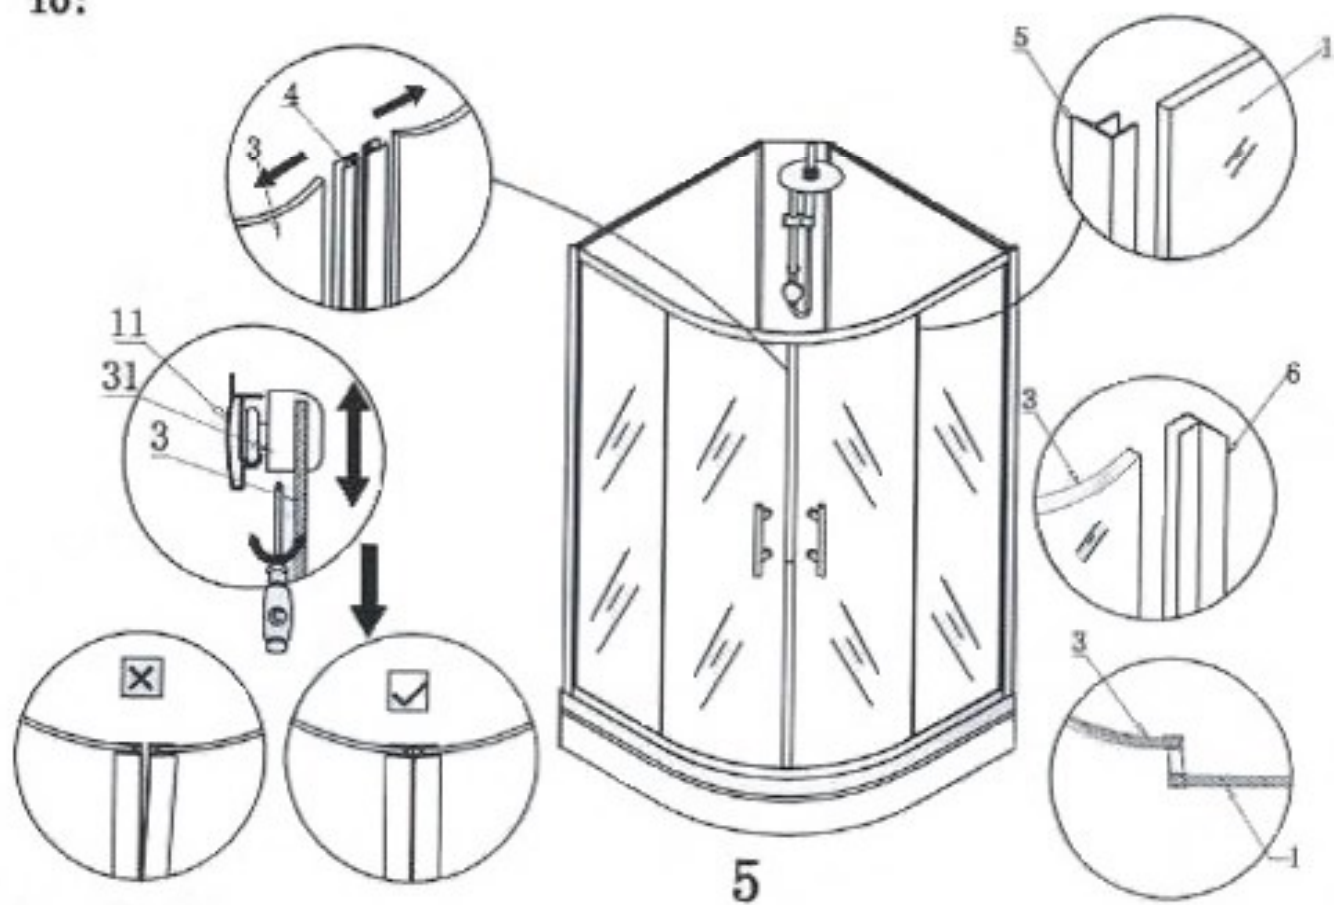

11:

